



Description of functions and interfaces

Table of contents

1	Abou	ıt this do	cument		4					
	1.1	Purpose	e and scope o	of application	4					
	1.2	Applicat	ole document	ts	4					
	1.3	Labels i	n this manua	l	4					
	1.4	Warning	gs in this mar	nual	5					
2	Prod	duct description								
	2.1	General	l functionality		6					
	2.2	Operatir	ng principle		6					
3	Block	k diagrar	n		8					
4	Interf	faces			9					
	4.1	IO-Link.			9					
5	Oper	ating fur	nctions		11					
	5.1	Encode	r settings		11					
	5.2	Speed u	unit		13					
	5.3	Speed f	ilter		13					
	5.4	Position	value setting	J	15					
	5.5	Position	١		15					
	5.6	Speed			16					
	5.7	Speed r	monitor		16					
	5.8	Direction	n monitor		18					
	5.9	Standsti	ill monitor		19					
	5.10	Temper	ature monito	ring	21					
	5.11	Output	settings		22					
	5.12	Behavio	or at startup		24					
6	Diagi	nostic fu	nctions		26					
	6.1	Device	status		26					
	6.2	Operatir	ng hours		26					
	6.3		·							
	6.4	Revolution counter								
7	ldent	ification			28					
8	Anne	x			29					
	8.1									
		8.1.1 8.1.2		n						
		8.1.3								
	-		8.1.3.1	Encoder Settings						
			8.1.3.2	Unit						
			8.1.3.3	Signal Processing	32					

Baumer Table of contents

9	List of abbrev	iations		38
	8.1.5	Diagnosis		36
			1	
		8.1.3.6	Digital Output	35
		8.1.3.5	Switched Signal Channel Settings	33
		8.1.3.4	Alarm Settings	33

1 | About this document Baumer

1 About this document

1.1 Purpose and scope of application

This document enables safe and efficient sensor parameterization using various interfaces. The manual describes the functions and is intended to support installation and software use.

The illustrations are examples only. Deviations are at the discretion of *Baumer* at all times. This manual is a supplement to the existing product documentation.

This manual applies to the following product families:

Device ID	Device name
40001 (0x009C41)	EB200E.IR

1.2 Applicable documents

- Available for download at <u>www.baumer.com</u>:
 - Data sheet
 - EU Declaration of Conformity
- Attached to product:
 - Quickstart
 - General information sheet (11042373)

1.3 Labels in this manual

Identifier	Usage	Example	
Dialog element	Indicates dialog elements.	Click the <i>OK</i> button.	
Unique name	Indicates the names of products, files, etc.	Internet Explorer is not supported in any version.	
Code	Indicates entries.	Enter the following IP address: 192.168.0.250	

1.4 Warnings in this manual

Warnings draw attention to potential personal injury or material damage. The warnings in this manual indicate different hazard levels:

Symbol	Warning term	Explanation						
	DANGER	Indicates an imminent potential danger with high risk of death or serious personal injury if not being avoided.						
	WARNING	Indicates potential danger with medium risk of death or (serious) personal injury if not being avoided.						
	CAUTION	Indicates a danger with low risk, which could lead to light or medium injury if not avoided.						
	NOTE	Indicates a warning of material damage.						
-`\`-	INFO	Indicates practical information and tips that enable optimal use of the devices.						

2 | Product description Baumer

2 Product description


2.1 General functionality

The rotary encoder (comprising sensor and magnetic rotor) shall be used for angle and position feedback as well as speed measurement.

The sensor can be used in the following operating modes:

- Incremental rotary encoder (HTL)
- Motion Monitor (switching outputs, parameterizable)
- Incremental rotary encoder IO-Link


In each of the 3 operating modes, sensor parameterization is via IO-Link interface.

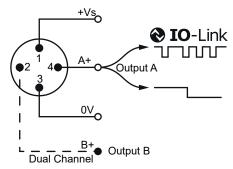

III. 1: Output signals

2.2 Operating principle

 The sensor element delivers measurement signals for the magnetic rotor's relative motion. This position information is interpolated and output as square wave signals in operating mode *Incremental encoder (HTL)*.



III. 2: Output function: Incremental encoder (HTL)

In operating mode *Motion Monitor*, both position and speed information are monitored straight in the sensor and output as switching signals at output A+ and/or B+:

- Speed Monitor (SSC1)
- Direction Monitor (SSC2)
- Standstill Monitor (SSC3)

When used as *Incremental encoder IO-Link*, the interpolated position and speed information as well as the binary states of the integrated *Motion Monitor* are transmitted as IO-Link process data.


Octet	0 3	4 7		8	3	
Name	Speed	Position	SSC3	Alarm	SSC2	SSC1
Description	Speed [steps/s] or [rpm]	Position [steps]	Standstill Monitor	Alarm Monitor	Direction Monitor	Speed Monitor
Туре	32-bit Integer	32-bit Integer	Boolean	Boolean	Boolean	Boolean
Bit offset	40	8	4	3	1	0
Sub index	1	2	3	4	5	6

Furthermore, IO-Link allows for retrieving secondary and statistical data such as:

- Device temperature
- Operating hours
- Number of revolutions

3 | Block diagram Baumer

3 Block diagram

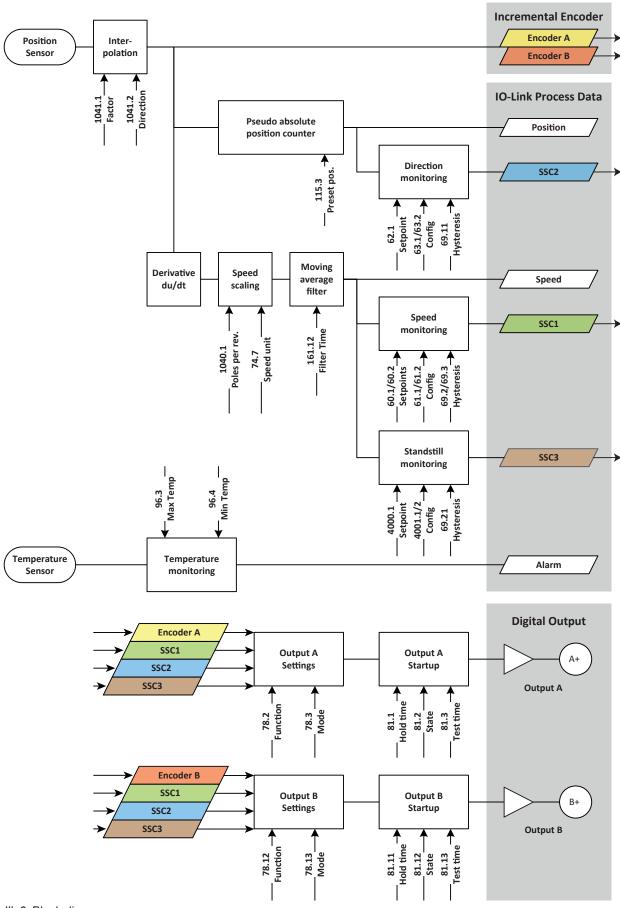

III. 3: Block diagram


Baumer Interfaces | 4

4 Interfaces

4.1 IO-Link

IO-Link enables manufacturer-independent digital, bidirectional point-to-point communication. For this purpose, actuators or sensors are connected to an IO-Link master by standardized 3-wire connecting cables.

The IO-Link interface serves for parameterization of the sensor functions. In addition, measurement data and the function-generated sensor and status information are digitally transmitted in the form of process data to the machine controller (PLC). Secondary data informing on the machine condition allow for continuous process monitoring and process optimization.

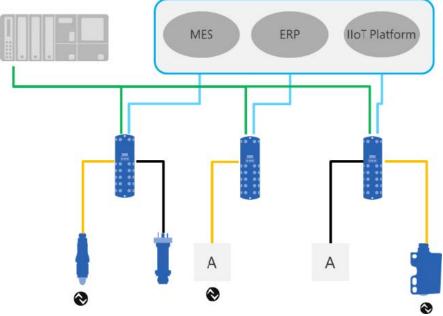

III. 4: IO-Link architecture

The IO-Link master clustering several sensors connects the controller via the respective fieldbus system, which is the so-called operational technology communication (OT communication). In addition, another Ethernet-based connection to the IO-Link master(e.g., via OPC UA or MQTT) enables direct communication between sensor and IT systems (IT communication).

There are two types of communication between IO-Link master and device.

Cyclic communication:

transmission in real time - This data and information (process data) is used for process control in automation systems.

Acyclic communication:

Time-uncritical communication for secondary data transmission or sensor parameterization.

4 | Interfaces Baumer

To address both sensor functions and secondary data correctly, IO-Link interface description utilizes the so-called IODD (IO Device Description). IODD is available for download on the sensor website (download section). Digital sensor communication, secondary data and the option of direct sensor communication with the IT world makes IO-Link a cornerstone in Smart Factory.



INFO

For evaluation, parameterization and use of IO-Link sensors, Baumer provides both IO-Link USB-C master and Baumer Sensor Suite. The IO-Link USB-C Master enables IO-Link devices to communicate with the computer without external power supply. Baumer Sensor Suite is a computer-based tool to understand and use IO-Link devices and to visualize sensor functions of different sensor brands. This allows for engineering both at the workplace and straight at the machine. Further information at baumer.com/bss.

5 Operating functions

5.1 Encoder settings

Pulse number and encoder resolution are defined in *encoder settings*. The following parameters can be defined:

- Poles per revolution
- Interpolation factor
- Direction of rotation

 


INFO

To ensure the correct speed unit [rpm] is output, mandatory to specify the poles per revolution of the applied magnetic rotor. This can be seen in the magnetic rotor type reference *EBS.R-FNxxx*(poles per revolution = xxx).

The interpolation factor defines the pulse number output per each pole of the magnetic rotor applied, the resulting pulse number [pulses/rev], number of steps [steps/rev] of the (IO-Link) position value as well as the attainable angular resolution [°]:

Pulses per revolution = poles per revolution x interpolation factor steps per revolution = pulses per revolution x 4 angle resolution = 360° / steps per revolution





INFO

Readout of number of steps per revolution is via Index 1041.3.

Example: Incremental encoder (HTL) with 512 pulses per revolution



III. 5: Type reference number in the example

The number of pulses, number of steps and angular resolution can be determined by the encoder settings (example):

- Number of pulses = 64 x 8 = 512 pulses per revolution
- Number of steps = 512 x 4 = 2048 steps per revolution
- Angular resolution = 360° / 2048 = 0.176°

The parameterized direction of rotation has an effect on the phase in operating mode *Incremental encoder (HTL)* and the counting direction applied to the digital position value in operating mode *Incremental encoder IO-Link*.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: encoder settings

Name	Index	Subindex	Description						
Scale Settings	Scale Settings								
Poles per Revolution	1040	1	Number of poles per revolution: 2256						
			32: 32 poles per revolution (for EBS.R-FN032)						
			64: 64 poles per revolution (for EBS.R-FN064) [default]						
Interpolation Settings									
Interpolation Settings. Fac-	1041	1	Interpolation factor:						
tor			■ 1: 1-fold						
			2: 2-fold						
			■ 3: 3-fold						
			■ 4: 4-fold						
			• 5: 5-fold						
			8: 8-fold [default]						
			■ 10: 10-fold						
			■ 12: 12-fold						
			■ 16: 16-fold						
Interpolation Settings. Di-	1041	2	Interpolation direction:						
rection			0: A before B / up counting (CW) [default]						
			1: A before B / up counting (CCW)						
Interpolation Settings. Steps per revolution	1041	3	Number of steps per revolution (= Poles per Revolution x Interpolation Factor x 4)						

Also see about this

Annex [▶ 29]

5.2 Speed unit

Function Speed unit defines the sensor's speed unit.

The *speed unit function* allows for the following parameters:

- Revolutions per minute
- Steps per second

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: speed unit


Name	Index	Subindex	Description
Unit.Speed	74	7	Choose physical unit for the measured speed: 1997: steps/s [default] 1085: rpm
			For correct rpm scaling, please set up also number of poles of the used magnetic rotor (Index 1040.1).

Also see about this

Annex [▶ 29]

5.3 Speed filter

The speed filter is smoothing the speed signal by help of a moving average filter. This will reduce speed noise according to the required dynamics. The filter characteristic can be modified via the filter time.

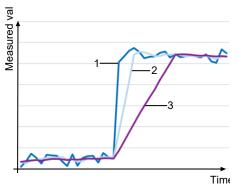

III. 6: Speed filter

1 Raw data

- Data after filtering by Moving Average, filter time 20ms
- 3 Data after filtering by Moving Average, filter time 200ms

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Speed filter

Name	Index	Subindex	Description
Moving Average Filter.	161	11	Enables or disables the speed filter:
Speed Filter			0: Disabled
			1: Enabled [default]
Moving Average Filter.	161	12	Timebase for speed calculation [ms]:
Speed Averaging Time			• 5: 5 ms
			■ 10: 10 ms
			■ 20: 20 ms [default]
			• 50: 50 ms
			■ 100: 100 ms
			■ 200: 200 ms

Also see about this

Annex [▶ 29]

5.4 Position value setting

This function is for setting the position value.

For more detailed information on the following please refer to chapter Annex [29].

IO-Link access: Set position value

Name	Index	Subindex	Description
Preset Settings.Preset Position Value	115	3	Write to this Index sets the preset position value:
			0: 0 steps [default]
Baumer Commands	1000	0	Write to this Index executes the command:
			208: Preset Position

First, define the required position value in parameter *Preset Position Value*. Then the preset is executed by setting the parameter *Baumer Commands* to the command 208 (*Preset Position*).

Also see about this

Annex [≥ 29]

5.5 Position

This function reads out the encoder position.

The position is transmitted as part of the cyclic communication (process data). In addition, the position information is available via acyclic communication.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Position

Name	Index	Subindex	Description
Measurement Values.Posi-	88	10	Value of actual position [steps]
tion			

Also see about this

Annex [▶ 29]

5.6 Speed

The speed information is transmitted as part of cyclic communication (process data). In addition, the speed information is available via acyclic communication.

For more detailed information on the following please refer to chapter Annex [29].

IO-Link access: Speed

Name	Index	Subindex	Description
Measurement Val-	88	20	Value of actual speed [unit according to Index
ues.Speed			74]

Also see about this

Annex [▶ 29]

5.7 Speed monitor

Speed monitoring is watching the speed according to the set parameters and outputs the result as binary status information via IO-Link (SSC1: Speed Monitor) or, optionally, as switching output information via output A or B.

The function can be configured via the following parameters:

- Mode (Deactivated, Single Point or Window Mode)
- Logic (high active or low active)
- Setpoints (SP1 and SP2)
- Hysteresis (Hysteresis SP1 and Hysteresis SP2)


Mode *Single Point* is for speed monitoring towards parameter *SP1* (*Speed max*) in the specified direction of rotation. Mode *Window Mode* is for monitoring the speed range between *SP1* (*Speed max*) and *SP2* (*Speed min*). Optional parameterization of hysteresis of SP1 and SP2 may prevent unwanted switching behavior when speed is close to the limits.

Logic can be used for inverting the switching behavior if required.



INFO

Switching thresholds and hysteresis must be specified in the speed unit (steps/s or rpm) configured according to index 74.

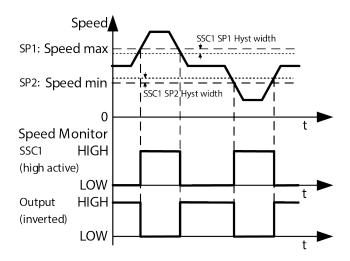

III. 7: Speed monitor

For more detailed information on the following please refer to chapter *Annex* [> 29].

IO-Link access: Speed monitor

Name	Index	Subindex	Description
SSC1 Setpoints			
SSC1 Setpoints.SP 1	60	1	Speed max [Speed unit Index 74]:
			0: zero speed [default]
SSC1 Setpoints.SP 2	60	2	Speed min [Speed unit Index 74]:
			0: zero speed [default]
SSC1 Config			
SSC1 Config.Logic	61	1	Logic of SSC1:
			0: high active [default]
			■ 1: low active
SSC1 Config.Mode	61	2	Mode of SSC1:
			0: Deactivated (SSC1 state is "inactive")
			1: Single Point [default]
			2: Window Mode
Hysteresis.SSC1 SP1	69	2	Speed SP1 Hysteresis [Speed unit Index 74]:
Width			0: no hysteresis [default]
Hysteresis.SSC1 SP2	69	3	Speed SP2 Hysteresis [Speed unit Index 74]:
Width			0: no hysteresis [default]

Also see about this

Annex [▶ 29]


5.8 Direction monitor

The direction monitor is watching the direction of rotation according to the set parameters and outputs the result as binary status information via IO-Link (SSC2: Direction Monitor) or optionally as a switching output information via output A or B.

The function can be configured via the following parameters:

- Mode (Deactivated or Single Point)
- Logic (high active or low active)
- Switching direction of rotation (SP1)
- Position hysteresis

SP1 defines the direction of rotation to trigger the direction monitor. Optional parameterization of a position hysteresis can prevent unwanted switching behavior at minor movement close to standstill. Parameter *Logic* may be used to invert the switching behavior if required.

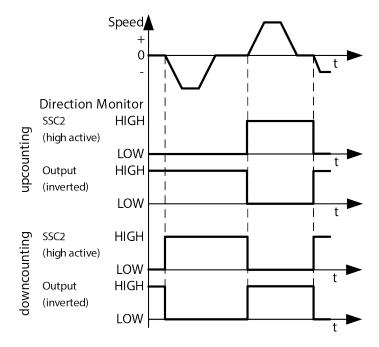

III. 8: Direction monitor

For more detailed information on the following please refer to chapter Annex [29].

IO-Link access: Direction monitor

Name	Index	Subindex	Description
SSC2 Setpoints			
SSC2 Setpoints.SP 1	62	1	Monitoring Direction (activation of SSC2 in case of):
			0: upcounting direction [default]
			1: downcounting direction

Name	Index	Subindex	Description
SSC2 Config			
SSC2 Config.Logic	63	1	Logic of SSC2:
			0: high active [default]
			■ 1: low active
SSC2 Config.Mode	63	2	Mode of SSC2:
			0: Deactivated (SSC2 state is "inactive")
			1: Single point [default]
Hysteresis.SSC2 Width	69	11	Direction Hysteresis in other direction [steps]:
			0: no hysteresis [default]

Also see about this

Annex [▶ 29]


5.9 Standstill monitor

Standstill monitoring is watching movement according to the set parameters and outputs the result as binary status information via IO-Link (SSC3: Standstill Monitor) or optionally as a switching output information via output A or B.

The function can be configured via the following parameters:

- Mode (Deactivated or Single Point)
- Logic (high active or low active)
- Standstill threshold

Optional parameterization of a hysteresis will influence the sensitivity in detecting standstill. Parameter *Logic* may be used to invert the switching behavior if required.

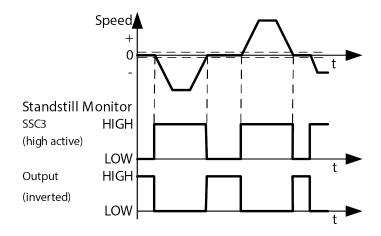

III. 9: Standstill monitor

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Standstill monitor

Name	Index	Subindex	Description
SSC3 Config.Logic	4001	1	Logic of SSC3:

Name	Index	Subindex	Description
			0: high active [default]
			1: low active
SSC3 Config.Mode	4001	2	Mode of SSC3:
			0: Deactivated (SSC3 state is "inactive")
			1: Single point [default]
Hysteresis.SSC3 Width	69	21	Standstill threshold [Speed unit Index 74]:
			0: no hysteresis [default]

Also see about this

Annex [≥ 29]

5.10 Temperature monitoring

This function is for monitoring the device temperature. Once the set limits are exceeded or fallen below, alarm bit (AL) will be set in the process data.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Temperature alarm settings

Name	Index	Subindex	Description
Max Temperature	96	3	If the current device temperature exceeds this value, alarm bit (AL) in process data will be set. 95: +95 °C
Min Temperature	96	4	If the current device temperature is below this value, alarm bit (AL) in process data will be set. -40:-40 °C

Also see about this

Annex [▶ 29]

5 | Operating functions Baumer

5.11 Output settings


Output A is IO-Link capable. The following output functions are programmable:

- Encoder channel A
- Speed monitor
- Direction monitor
- Standstill monitor

Output functions of *Dual Channel* (output B):

- Encoder channel B
- Speed monitor
- Direction monitor
- Standstill monitor

If no encoder channel is output, the *Mode* parameter may be used to invert the switching behavior.

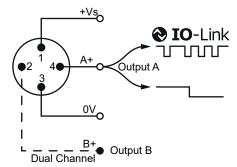

For detailed information on the access data listed see chapter Annex [29].

IO-Link access: Switching output settings


Name	Index	Subindex	Description
Output Settings.Output A	78	2	Defines the function of output A:
Function			60: Encoder channel A [default]
			■ 100: SSC1 State (Speed Monitor)
			200: SSC2 State (Direction Monitor)
			• 300: SSC3 State (Standstill Monitor)
Output Settings.Output A	78	3	Defines the logic of output A:
Mode			■ 1: Direct
			2: Inverted [default]
Output Settings.Output B	78	12	Defines the function of output B:
Function			61: Encoder channel B [default]
			■ 100: SSC1 State (Speed Monitor)
			■ 200: SSC2 State (Direction Monitor)
			• 300: SSC3 State (Standstill Monitor)

Name	Index	Subindex	Description
Output Settings.Output B	78	13	Defines the logic of output B:
Mode			1: Direct
			2: Inverted [default]

5 | Operating functions Baumer

5.12 Behavior at startup

If EB200E is used as stand-alone motion monitor (speed, direction of rotation, standstill), various startup settings may be helpful to ensure correct startup behavior in the application.

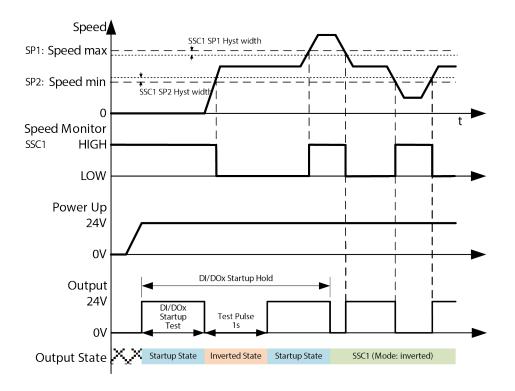

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Behavior at power-on

Name	Index	Subindex	Description
Output Startup.Output A Startup Hold Time	81	1	Within this time [ms] after startup, the output is hold on the startup state:
			o: startup hold disabled [default]
Output Startup.Output A	81	2	• 0: low
Startup State			1: high [default]
Output Startup.Output A Test Time	81	3	After this time [ms] after startup, the output is set to its inverted startup state for 1 s: 0: startup test disabled [default]
Output Startup.Output B Startup Hold Time	81	11	Within this time [ms] after startup, the output is hold on the startup state:
			0: startup hold disabled [default]
Output Startup.Output B Startup State	81	12	0: low 1: high [default]

Name	Index	Subindex	Description
Output Startup.Output B Test Time	81	13	After this time [ms] after startup, the output is set to its inverted startup state for 1 s:
			0: startup test disabled [default]

Also see about this

Annex [≥ 29]

6 | Diagnostic functions Baumer

6 Diagnostic functions

6.1 Device status

Function *Device status* is for retrieving information on the device status.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Device status

Name	Index	Subindex	Description
Device Status	36	0	0: Device is operating properly
			• 4: Failure

Also see about this

Annex [▶ 29]

6.2 Operating hours

The operating time of the sensor is permanently recorded. This function reads out the total of the sensor's operating hours.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Operating hours

Name	Index	Subindex	Description
Operation Time.Lifetime	211	3	Operating time [h] (since production)

Also see about this

Annex [▶ 29]

6.3 Device temperature

This function reads the sensor's temperature information.

For more detailed information on the following please refer to chapter Annex [29].

IO-Link access: Device temperature

Name	Index	Subindex	Description
Device Temperature. Current	208	1	Current Device Temperature [°C]
Device Temperature. Life-time Min	208	4	Minimum Device Temperature [°C] (over lifetime)
Device Temperature. Life-time Max	208	5	Maximum Device Temperature [°C] (over lifetime)

Also see about this

Annex [▶ 29]

6.4 Revolution counter

The number of full rotations of the rotor is permanently recorded. This function is for reading out the number of revolutions completed in both directions of rotation.



INFO

Revolutions are only detected while in operation. Die korrekte Parametrierung der Polanzahl des verwendeten Magnetrotors ist zwingend erforderlich (siehe Encodereinstellungen). Otherwise, there might be a considerable discrepancy between number of revolutions output and the number of revolutions truly completed.

For more detailed information on the following please refer to chapter Annex [29].

IO-Link access: Revolution counter

Name	Index	Subindex	Description
Revolutions Count. Lifetime	231	3	Number of full revolutions (over lifetime)

Also see about this

- Annex [≥ 29]
- Encoder settings [▶ 11]

7 | Identification Baumer

7 Identification

These functions read or write sensor identification information.

For more detailed information on the following please refer to chapter *Annex* [29].

IO-Link access: Identification

Name	Index	Subindex	Description
Vendor Name	16	0	Vendor name that is assigned to a vendor ID, e. g. Baumer.
Vendor Text	17	0	Additional information about the vendor, e. g. www.baumer.com
Product Name	18	0	Complete product name.
Product ID	19	0	Vendor-specific product or type identification (e.g., item number or model number).
Product Text	20	0	Additional product information for the device.
Application Specific Tag	24	0	Possibility to mark a device with user-or application-specific information.
Function Tag	25	0	Possibility to mark a device with function-specific information.
Location Tag	26	0	Possibility to mark a device with location-specific information.
Serial Number	21	0	Unique, vendor-specific identifier of the individual device.
Hardware Version	22	0	Current hardware version
Firmware Revision	23	0	Current firmware version

Also see about this

Annex [▶ 29]

Baumer

8 Annex

8.1 IO-Link

8.1.1 PDI

Process Data mapping of Process Data Input

	Speed	Position	Status Bits
Туре	Int32	Int32	4x Boolean
Bit Offset	71 40	39 8	7 0
Subindex	1	2	6 3

Subindex	Bit Offset	Name	Туре	Range	Description
1	40	Speed	Int32	-2^312^31-1	Speed value [unit according Index 74]
2	8	Position	Int32	-2^312^31-1	Position value [steps]
3	0	SSC1	Boolean	0/1	State of Speed Monitor (SSC1)
4	1	SSC2	Boolean	0/1	State of Direction Monitor (SSC2)
5	3	Alarm	Boolean	0/1	0: Device temperature within limit values1: Device temperature exceeds limit val-
					ues
6	4	SSC3	Boolean	0/1	State of Standstill Monitor (SSC3)

8.1.2 Identification

Index	Subindex	Name	Data type	Access rights	Value range	Description
16	0	Vendor Name	String	R	ASCII	Vendor name that is assigned to a vendor ID, e. g. Baumer.
17	0	Vendor Text	String	R	ASCII	Additional information about the vendor, e. g. www.baumer.com
18	0	Product Name	String	R	ASCII	Complete product name, e. g. EB200E.
19	0	Product ID	String	R	ASCII	Reference for IODD
20	0	Product Text	String	R	ASCII	Additional product information for the device.
21	0	Serial Number	String	R	ASCII	Serial number
22	0	Hardware Version	String	R	ASCII	Current hardware version
23	0	Firmware Revision	String	R	ASCII	Current firmware version
24	0	Application specific Tag	String	R/W	ASCII	Possibility to mark a device with user-or application-specific information.
25	0	Function Tag	String	R/W	ASCII	Possibility to mark a device with function-specific information.
26	0	Location Tag	String	R/W	ASCII	Possibility to mark a device with location-specific information.

Baumer

8.1.3 Parameter

8.1.3.1 Encoder Settings

Index	Subindex	Name	Data type	Access rights	Value range	Description
Scale	Settings		, ,			
1040	1	Poles per Revolution	Uint16	R/W	2256	Number of poles of the used magnetic rotor:
						32: 32 poles per revolution (for EBS.R-FN032)
						• 64: 64 poles per revolution (for EBS.R-FN064) [default]
Interp	olation Settir	ngs		<u>'</u>		
1041	1	Interpolation Set-	Uint16	R/W	116	Interpolation factor:
		tings. Factor				■ 1: 1-fold
						• 2: 2-fold
						• 3: 3-fold
						• 4: 4-fold
						• 5: 5-fold
						8: 8-fold [default]
						■ 10: 10-fold
						■ 12: 12-fold
						■ 16: 16-fold
1041	2	Interpolation Set-	Uint8	R/W	01	Interpolation direction:
		tings. Direction				0: A before B / up counting (CW) [default]
						1: A before B / up counting (CCW)
1041	3	Interpolation Set- tings. Steps per rev- olution	Uint32	R		Number of steps per revolution (= Poles per Revolution x Interpolation Factor x 4)

					Value	
Index	Subindex	Name	Data type	Access rights	range	Description
74	7	Unit.Speed	Uint16	R/W	10851997	Choose physical unit for the measured speed:
						■ 1997: steps/s [default]
						■ 1085: rpm
						For correct rpm scaling, please set up also number of poles of the used magnetic rotor (Index 1040.1).

Signal Processing 8.1.3.3

Unit

					Value	
Index	Subindex	Name	Data type	Access rights	range	Description
Movin	g average Fi	lter				
161	11	Moving Average Fil-	Uint16	R/W	01	Enables or disables the speed filter:
		ter. Speed Filter				0: Disabled
						1: Enabled [default]
161	12	Moving Average Fil-	Uint16	R/W	5200	Timebase for speed calculation [ms]:
		ter. Speed Averag-				• 5: 5 ms
		ing Time				■ 10: 10 ms
						• 20: 20 ms [default]
						• 50: 50 ms
						■ 100: 100 ms
						■ 200: 200 ms
Preset	Settings	'	1		1	
115	3	Preset Settings.Pre-	Int32	R/W	-2^312^3	Write to this Index sets the preset position value:
		set Position Value			1-1	0: 0 steps [default]
1000	0	Baumer Commands	Uint32	W	0208	Write to this Index executes the command:
						208: Preset Position

Baumer

8.1.3.4 Alarm Settings

					Value					
Index	Subindex	Name	Data type	Access rights	range	Description				
Temp	Temperature Alarm Settings									
96	3	Max Temperature	Float32	R/W		If the current device temperature exceeds this value, alarm bit (AL) in process data will be set. 95: +95 °C [default]				
96	4	Min Temperature	Float32			If the current device temperature is below this value, alarm bit (AL) in process data will be set. -40: -40 °C [default]				

8.1.3.5 Switched Signal Channel Settings

					Value	
Index	Subindex	Name	Data type	Access rights	range	Description
SSC1	Setpoints					
60	1	SSC1 Setpoints.SP	Int32	R/W	-2^312^3	Speed limit max [Speed unit Index 74]:
		1			1-1	0: zero speed [default]
60	2	SSC1 Setpoints.SP	Int32	R/W	-2^312^3	Speed limit min [Speed unit Index 74]:
		2			1-1	0: zero speed [default]
SSC1	Config					
61	1	SSC1 Config.Logic	Uint8	R/W	01	Logic of SSC1:
						0: high active [default]
						1: low active
61	2	SSC1 Config.Mode	Uint8	R/W	02	Mode of SSC1:
						0: Deactivated (SSC1 state is "inactive")
						1: Single point [default]
						2: Window mode
69	2	Hysteresis.SSC1	Int32	R/W	02^31-1	Speed SP1 Hysteresis [Speed unit Index 74]:
		SP1 Width				0: no hysteresis [default]

Index	Subindex	Name	Data type	Access rights	Value range	Description
69	3	Hysteresis.SSC1	Int32	R/W	02^31-1	Speed SP2 Hysteresis [Speed unit Index 74]:
		SP2 Width				0: no hysteresis [default]
SSC2	Setpoints					
62	1	SSC2 Setpoints.SP	Int32	R/W	01	Monitoring Direction (activation of SSC2 in case of):
		1				0: upcounting direction [default]
						 1: downcounting direction
SSC2	Config					
63	1	SSC2 Config.Logic	Uint8	R/W	01	Logic of SSC2:
						0: high active [default]
						1: low active
63	2	SSC2 Config.Mode	Uint8	R/W	01	Mode of SSC2:
						0: Deactivated (SSC2 state is "inactive")
						1: Single point [default]
69	11	Hysteresis.SSC2	Int32	R/W	02^31-1	Direction Hysteresis in other direction [steps]:
		Width				0: no hysteresis [default]
SSC3	Config	'		'	1	
4001	1	SSC3 Config.Logic	Uint8	R/W	01	Logic of SSC3:
						0: high active [default]
						■ 1: low active
4001	2	SSC3 Config.Mode	Uint8	R/W	01	Mode of SSC3:
						0: Deactivated (SSC3 state is "inactive")
						1: Single point [default]
69	21	Hysteresis.SSC3	Int32	R/W	02^31-1	Standstill threshold [Speed unit Index 74]:
		Width				0: no hysteresis [default]

Baumer

8.1.3.6 Digital Output

Index	Subindex	Name	Data type	Access rights	Value	Description
	t Settings	Italiio	Data type	Access rights	runge	Description
78	2	Output Settings.Out-	Uint16	R/W	60300	Defines the function of output A:
		put A Function				60: Encoder channel A [default]
						■ 100: SSC1 State (Speed Monitor)
						 200: SSC2 State (Direction Monitor)
						 300: SSC3 State (Standstill Monitor)
78	3	Output Settings.Out-	Uint8	R/W	12	Defines the logic of output A:
		put A Mode				■ 1: Direct
						2: Inverted [default]
78	12	Output Settings.Out-	Uint16	R/W	61300	Defines the function of output B:
		put B Function				61: Encoder channel B [default]
						■ 100: SSC1 State (Speed Monitor)
						 200: SSC2 State (Direction Monitor)
						 300: SSC3 State (Standstill Monitor)
78	13	Output Settings.Out-	Uint8	R/W	12	Defines the logic of output B:
		put B Mode				1: Direct
						2: Inverted [default]
Outpu	t Startup					
81	1	Output Startup.Output A Startup Hold Time	Uint32	R/W	02^32-1	Within this time [ms] after startup, the output is hold on the startup state:
						o: startup hold disabled [default]
81	2	Output Startup.Out-	Uint8	W	01	• 0: low
		put A Startup State				1: high [default]
81	3	Output Startup.Out-	Uint32	W	02^32-1	After this time [ms] after startup, the output is set to its in-
		put A Test Time				verted startup state for 1 s:
						0: startup test disabled [default]

Index	Subindex	Name	Data type	Access rights	Value range	Description
81	11	Output Startup.Out- put B Startup Hold Time	Uint32	W	02^32-1	Within this time [ms] after startup, the output is hold on the startup state: • 0: startup hold disabled [default]
81	12	Output Startup.Output B Startup State	Uint8	W	01	0: low1: high [default]
81	13	Output Startup.Output B Test Time	Uint32	W	02^32-1	After this time [ms] after startup, the output is set to its inverted startup state for 1 s: • 0: startup test disabled [default]

8.1.4 Observation

Index	Subindex	Name	Data type	Access rights	Value range	Description
88	10	Measurement Values.Position	Int32	R	-2^312^3 1-1	Value of actual position [steps].
88	20	Measurement Values.Speed	Int32	R	-2^312^3 1-1	Value of actual speed [unit according Index 74].

8.1.5 Diagnosis

					Value				
Index	Subindex	Name	Data type	Access rights	range	Description			
Devic	Device Status								
36	0	Device Status	Uint8	R	04	0: Device is operating properly			
						■ 4: Failure			
Device	Device Temperature								
208	1	Device Tempera- ture. Current	Float32	R	±1.4^-45 to ±3.4^38	Current Device Temperature [°C]			
208	4	Device Tempera- ture. Lifetime Min	Float32	R	±1.4^-45 to ±3.4^38	Minimum Device Temperature [°C] (over lifetime)			

Baumer

					Value		
Index	Subindex	Name	Data type	Access rights	range	Description	
208	5	Device Tempera- ture. Lifetime Max	Float32	R	±1.4^-45 to ±3.4^38	Maximum Device Temperature [°C] (over lifetime)	
Opera	tion Time						
211	3	Operation Time.Life-time	Uint32	R	02^32-1	Operating time [h] (since production)	
Revolutions Count							
231	3	Revolutions Count. Lifetime	Uint64	R	02^64-1	Number of full revolutions (over lifetime)	

9 | List of abbreviations Baumer

9 List of abbreviations

A+ Non-inverted connection of output A

AL Alarm bit

B+ Non-inverted connection of output B

CCW Counterclockwise

CW Clockwise

HTL High Threshold Logic IODD IO Device Description

MQTT Message Queuing Telemetry Transport

OPC UA Open Platform Communications Unified Architecture

OT communication Operational Technology Communication

ppr Pulses per revolution rpm Revolutions per minute

SP1 Setpoint 1
SP2 Setpoint 2

SPS Programmable Logic Controller
SSC1 Switching Signal Channel 1
SSC2 Switching Signal Channel 2
SSC3 Switching Signal Channel 3

Baumer List of illustrations

List of illustrations

III. 1	Output signals	6
III. 2	Output function: Incremental encoder (HTL)	6
III. 3	Block diagram	8
III. 4	IO-Link architecture	9
III. 5	Type reference number in the example	11
III. 6	Speed filter	13
III. 7	Speed monitor	16
III. 8	Direction monitor	18
III. 9	Standstill monitor	19

